

User Manual

CE

Temperature 4-20mA or 2-10V transmitter for Pt100 or Pt1000 LSP-TST









Table of Contents

PREFACE	3
Document Revisions	4
Approvals	4
1. INTRODUCTION	5
1.1. General Information	5
1.2. Support and Services	5
1.3. Disposal Remarks	5
2. SAFETY INSTRUCTIONS	6
2.1.Symbols	6
2.2. Receipt and unpacking	6
2.3. Environment	6
2.4. Mounting	6
2.5. Cleaning	7
3. DESCRIPTION	8
4. FEATURES	8
5. INSTALLATION AND WIRING	9
5.1. Installation on TS-35 DIN Rail	9
5.2. Connections with Screw Terminals	9
6. SPECIFICATIONS	
7. CONFIGURATION TYPE AND ORDER CODE	10
8. DIMENSIONS	11
9. TERMINAL DESIGNATION	11
10. ELECTRICAL DIAGRAMS	12
11. APPLICATIONS	14
12. OPERATION AND MAINTENANCE	15
12.1. Operation	15
12.2. Maintenance	15
13. WARRANTY DISCLAIMER	15
13.1. Return of items	15
14. CONTACT INFORMATION	



PREFACE

Thank you for selecting our product!

This User Manual contains information needed for proper installation, operation, and maintenance of your product. A thorough understanding of these simple instructions will help you get the most of your product.

This document should be read thoroughly, and the safety instructions described in this manual should be followed carefully. If you have questions or concerns about the operation and maintenance of this product, please contact our customer support.

If a problem arise with the product, check if you followed the installation steps correctly. If the problem persists, contact an authorized Levtech dealer or our customer support.

All information in this User Manual is based on the latest product information available at the time of printing approval. Levtech reserves the right to make changes at any time without notice and without incurring any obligation.

Please always keep this manual together with the isolator as a reference to everyone who uses this product.



Document Revisions

Date	Version Number	Document Changes	
11-03-2021	1.0	Initial draft	
13-04-2021	2.0	Overall improvements	
15-04-2021	4-2021 3.0 Application examples added		
13-05-2021	4.0	Wiring diagram added	

Approvals

This document requires following approvals:

Name	Title
Levi Mihaly	General Manager



1. INTRODUCTION

1.1. General Information

This manual is the designated User Manual for the installation, safe operation, and maintenance of your product. It is divided into nine chapters covering general information, safety instructions, how to safely install and operate the product, maintenance, warranty, and contact information.

All personnel involved in the installation, operation, and maintenance of this equipment should read and understand this manual, particularly its safety instructions. Substandard performance and longevity, property damage, and personal injury may result from not knowing and following these instructions.

In order to ensure long product life, Levtech recommends that you utilize the product and perform maintenance by correctly following the instructions described in this guide. The manufacturer's warranty does not cover any damage resulting from the neglect of these instructions.

Levtech assumes no liability for damage caused by operation contrary to what is specified in this operating manual.

1.2. Support and Services

For information about further questions that are not answer in this manual, additional materials, and support, please contact:

- Q Lueta Nr. 319, Romania
- +40758576007
- office@levtech.ro
- www.levtech.ro

1.3. Disposal Remarks

DO NOT dispose of the product with domestic waste!

Electronic devices have to be disposed of according to the regional directives on electronic and electric waste disposal. In case of further questions, please consult your supplier. The supplier may take care of proper disposal.





2. SAFETY INSTRUCTIONS

2.1. Symbols

A WARNING	This symbol indicates information that, if ignored, could result possibly in personal injury or even death due to incorrect handling.
	This symbol indicates information that, if ignored, could possibly result in personal injury or physical damage due to incorrect handling.
NOTICE	Indicates information considered important, but not hazard-related.

2.2. Receipt and unpacking

Unpack the device without damaging it and check whether the device type corresponds to the one ordered. The packing should always follow the device until this has been permanently mounted.

2.3. Environment

Avoid direct sunlight, dust, high temperatures, mechanical vibrations and shock, and rain and heavy moisture.

2.4. Mounting

- Only technicians who are familiar with the technical terms, warnings, and instructions in the manual and who are able to follow these should connect the device.
- Mounting and connection of the device should comply with national legislation for mounting of electric materials, i.e. wire cross section, protective fuse, and location. Descriptions of input / output and supply connections are shown in this installation guide and on the side label.
- Use this device only in accordance with this instruction manual, as well as all applicable local and national laws and regulations. Only allow this device to be installed, operated, maintained, repaired, etc. by others who have also read and understood the user manual.
- Do not allow minors, untrained personnel, or personnel suffering from physical or mental impairment that would affect their ability to follow this manual to install, operate, maintain, or repair this device.
- Any untrained personnel who might be near the device while it is in operation MUST be informed that it is dangerous and fully instructed on how to avoid injury during its use.



MARNING

To avoid the risk of electric shock and fire, the safety instructions of this guide must be observed and the guidelines followed.

2.5. Cleaning

When disconnected, the device may be cleaned with a cloth moistened with distilled water.

- The specifications must not be exceeded, and the device must only be applied as described in the following.
- Do not use the device near water or moisture.
- Do not install near any heat sources such as radiators, stoves or other heaters that produce heat.
- To prevent ignition of the explosive atmospheres, disconnect power before servicing and do not separate connectors when energized and an explosive gas mixture is present.
- Do not mount or remove devices from the power rail when an explosive gas mixture is present.
- Before the commissioning of the device, this installation guide must be examined carefully, and only qualified personnel (technicians) should install this device.
- If the equipment is used in a manner not specified by the manufacturer, the protection provided by the equipment may be impaired.

CAUTION

To avoid the risk of explosion due to electrostatic charging of the enclosure, do not handle the units unless the area is known to be safe, or appropriate safety measures are taken to avoid electrostatic discharge.



3. DESCRIPTION

This temperature transmitter is designed to provide a linearised 4-20mA current loop signal output or a 2-10V output, proportional with the temperature characteristic of the temperature sensor connected on its input. On the input it is possible to connect both 3 wires and 2 wires Pt100 or Pt1000 sensors. This transmitter is suitable for any industrial application and with its DIN rail mountable enclosure it is easy to instal in electrical cabinets. The transmitter acquires its supply voltage from the current loop and no additional power supply needed. The temperature range can be modified only in the factory and it has to be ordered for a specific range. The default temperature range is -15°C to 150°C.

4. FEATURES

- RTD type Pt100 or Pt1000 Input
- 4 to 20 mA or 2 to 10V output on current loop
- TS-35 DIN rail mounting
- +/-0.1% accuracy
- IP40 case
- Screw terminals
- Easy to use
- Supply from current loop
- Made in EU







5. INSTALLATION AND WIRING

The module is designed to be installed, in a vertical position, on TS-35 DIN rail. For the best module performance and duration, avoid placing objects that could obstruct the ventilation. Never install the modules near heat sources.

5.1. Installation on TS-35 DIN Rail

Inserting the Module in the Rail:

1) Attach the module in the lower part of the rail, as shown in the left figure below. 2) Press the module upwards.

Removing the Module in the Rail:

1) Apply leverage using a screwdriver, as shown in the right figure below. 2) Press the module downwards.

5.2. Connections with Screw Terminals

Ø 0,2...2,5 mm² 8 mm

The module has been designed for screw-type terminal electrical connections. Proceed as follows to make the connections:

1) Strip the cables by 8mm.

2) Insert a screwdriver in hole, unscrewing the screw.

3) Insert the cable in the round hole.

4) Again, use the screwdriver to tight the screw.

5) Remove the screwdriver and make sure that the cable is tightly fastened in the terminal.



6. SPECIFICATIONS

Input		
Temperature Sensor	Pt100 or Pt1000	
RTD Open Circuit Protection	Yes	
Output		
Output Signal type	Current or voltage	
Output Range current type	4-20mA on current loop	
Over-Scale Limit	27mA	
Under-Scale Limit	2,2mA	
Output Resistance	>75Ω	
Output Current Noise	30nAPP	
Output Accuracy	0,1%	
Output Range voltage type	2-10V	
Power Supply		
Supply Voltage	16 ~ 30VDC	
Power Consumption	<40mA	
Over Voltage Surge Protection	36V	
Reverse-Polarity Protection	Yes	
Enclosure		
IP Rating	IP20	
Dimensions (L x D x H)	85 x 25 x 80mm	
Weight	62g	
Mounting	TS-35 DIN	
Maximum Cable Cross-Section	2.5mm ² (max.)	
Enviromental Conditions		
Working Temperature Range	- 10 ~ +60°C	
Storage Temperature Range	- 30 ~ +80°C	
Humidity Level	0 ~ 95% RH at 40°C, no condensation	


7. CONFIGURATION TYPE AND ORDER CODE

The LSP-TST has two different types and the product has to be ordered according to the sensor that is used with. The following table shows the ordering codes for each model. The temperature range is -15 to 150°C in default, it can not be changed by the user, if you need different measuring range please contact us prior ordering.


Order Code	Input	Output
LSP-TST-100-420	PT100	4-20mA
LSP-TST-100-210	PT100	2-10V
LSP-TST-000-210	PT1000	4-20mA
LSP-TST-000-420	PT1000	2-10V



8. DIMENSIONS

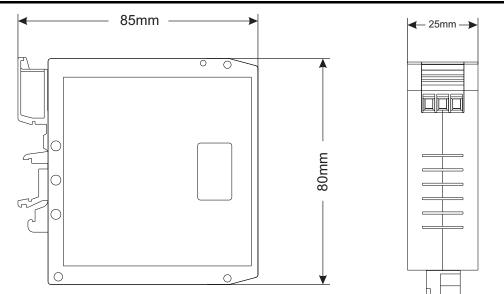

9. TERMINAL DESIGNATION

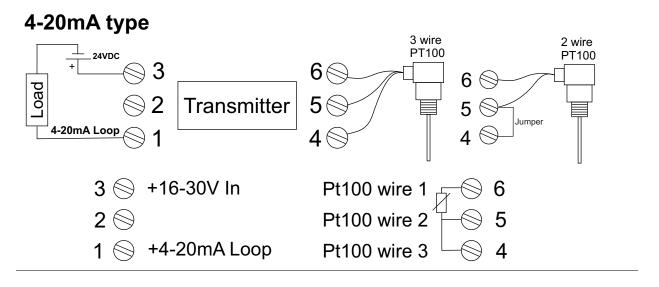


2-10V type 2 wire 3 wire PT100 PT100 2-10V Out 3 6 6 😂 (\mathbf{v}) GND 2 Transmitter 5 5 🖯 Jumper 4 🦻 24V In 4 1 3 🛞 +2-10V Out Pt100 wire 1 6 GND 5 2 😒 Pt100 wire 2 1 🛞 +16-30V In Pt100 wire 3 4



10. ELECTRICAL DIAGRAMS

LSP-TST-100-420 Wiring Example:

In the below example a Pt100 temperature sensor is connected to our transmitter and the output signal is connected to a Siemens Logo analog module on 4-20mA current loop.

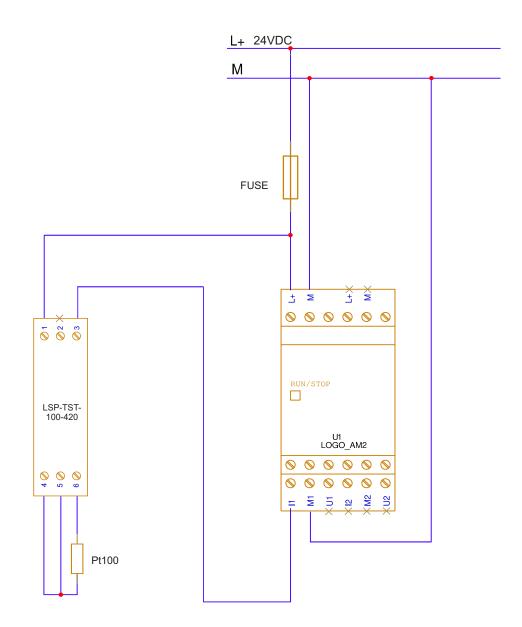




10. ELECTRICAL DIAGRAMS

LSP-TST-100-210 Wiring Example:

This wiring shows how a Pt100 temperature sensor is connected to our transmitter and the 2-10V output signal is connected to a Siemens Logo as an analog input.

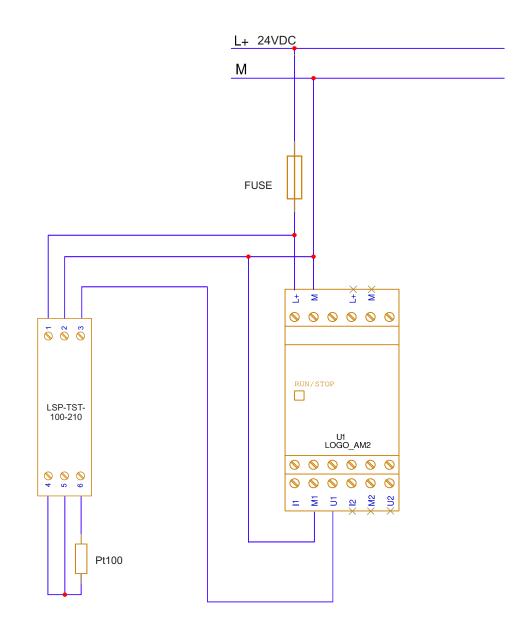




11. APPLICATIONS

This device can be used for several applications on industrial automation. The models can have voltage output and current output. It is ideal for industrial environment where temperature measurment is required using Pt100 or Pt1000 temperature sensors.

Example 1:

Suppose that you have a Pt100 temperature sensor and you have to measure the temperature in a water tank and control the heater of the water tank with a PLC. You can transmit the measured value to the PLC using our transmitter on a 4-20mA signal where the 4mA signal will corresponde to -15°C degree and the 20mA signal will corresponde to 150°C degree.

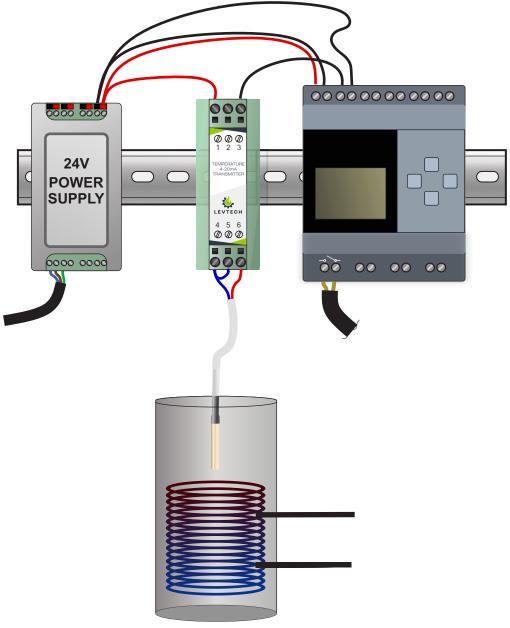



12. OPERATION AND MAINTENANCE

12.1. Operation

This isolator requires no user adjustments during commissioning. It comes with factory calibration ready for use.

If the isolator fails to operate, check for bad connections. In the unlikely event of the isolator not working, it should be returned to the supplier for repair or replacement.

12.2. Maintenance

Levtech suggests a quick check for terminal tightness and general unit condition. Always adhere to any site requirements for programmed maintenance.

13. WARRANTY DISCLAIMER

Levtech warrants this product to be free from significant deviations in material and workmanship for a period of 3 year from date of purchase. If repair or adjustment is necessary and has not been the result of abuse or misuse, within the 3 year period, please return-freight-prepaid and the correction of the defect will be made free of charge. If you purchased the item from our distributors and it is under warranty, please contact them to notify us of the situation. Levtech Service Department will determine if the product problem is due to deviations or customer misuse. Out-of-warranty products will be repaired on a charge basis.

13.1. Return of items

Authorization must be obtained from one of our representatives before returning items for any reason. When applying for authorization, have the model and serial number handy, including data regarding the reason for return. For your protection, items must be carefully packed to prevent damage in shipment and insured against possible damage or loss.

Levtech will not be responsible for damage resulting from careless or insufficient packing. A fee will be charged on all authorized returns.

Levtech reserves the right to make improvements in design, construction and appearance of our products without notice on which the buyer could reasonably have discovered the alleged defect or breach.



14. CONTACT INFORMATION



ADDRESS 319 Lueta 537140 Harghita Romania



office@levtech.ro

ADDRESS

Lueta Nr. 319 Post Code 537140 Harghita Romania

WEBSITE

https://www.levtech.ro/

SOCIAL MEDIA



Levtech



@levtechsp



@levtech_s_p

COMPANY DATA

LEVTECH SERVICE & PRODUCTION SRL Fiscal code (CIF): RO35733217 Trade Register: RC J19/134/2016 IBAN: RO39RNCB0152150349440001 BCR BANK